

# ROBERTS

## Revival UNO

DAB / DAB+ / FM RDS portable digital radio



**DAB**  
Digital Audio Broadcasting

**DAB+**

**+** Digital  
Radio


Please read this manual before use

## Contents

|   |       |  |           |
|---|-------|--|-----------|
| <i>Controls</i> .....                           | 2-3   | <i>Snooze function</i> .....                       | 15        |
| <i>Battery operation</i> .....                  | 3     | <i>Disable alarms</i> .....                        | 16        |
| <i>Using the buttons</i> .....                  | 3     | <i>Sleep function</i> .....                        | 16        |
| <i>Using the radio for the first time</i> ..... | 4     | <i>Automatically updating the clock</i> .....      | 17        |
| <i>Operating your radio - DAB</i> .....         | 5     | <i>Setting the clock manually</i> .....            | 17        |
| <i>Selecting a station - DAB</i> .....          | 6     | <i>Software version</i> .....                      | 18        |
| <i>Secondary services - DAB</i> .....           | 6     | <i>Display backlight dimmer</i> .....              | 18        |
| <i>Finding new stations - DAB</i> .....         | 6     | <i>Language function</i> .....                     | 19        |
| <i>Manual tuning - DAB</i> .....                | 7     | <i>Equaliser function (My EQ)</i> .....            | 19        |
| <i>Dynamic range control - DAB</i> .....        | 7     | <i>Headphone socket</i> .....                      | 20        |
| <i>Station order - DAB</i> .....                | 8     | <i>Auxiliary input socket</i> .....                | 20        |
| <i>Prune stations - DAB</i> .....               | 8     | <i>Line output socket</i> .....                    | 20        |
| <i>Operating your radio - FM</i> .....          | 9     | <i>System reset</i> .....                          | 21        |
| <i>Manual tuning - FM</i> .....                 | 9     | <i>Electro-magnetic compatibility advice</i> ..... | 21        |
| <i>FM Stereo / Mono</i> .....                   | 9     | <i>Product markings</i> .....                      | 21        |
| <i>Scan sensitivity setting - FM</i> .....      | 10    | <i>Safety notices</i> .....                        | 22        |
| <i>Favourite button</i> .....                   | 10    | <i>Specifications</i> .....                        | 22        |
| <i>Display options - DAB / FM</i> .....         | 11    | <i>Circuit features</i> .....                      | 22        |
| <i>Preset stations</i> .....                    | 12    | <i>Guarantee</i> .....                             | Back page |
| <i>Setting alarm times</i> .....                | 13-14 |  |           |
| <i>Cancelling alarms</i> .....                  | 15    |  |           |

## Controls


(Top)

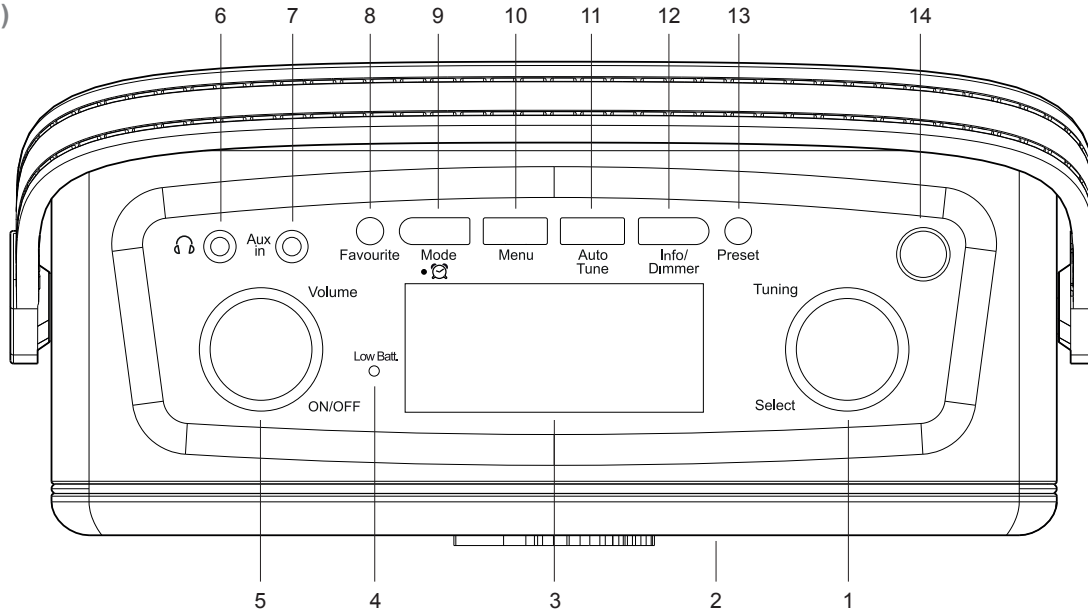

- |                                     |                          |
|-------------------------------------|--------------------------|
| 1. Tuning / Select / Snooze control | 8. Favourite button      |
| 2. Loudspeaker                      | 9. Mode / Alarm button   |
| 3. LCD display                      | 10. Menu button          |
| 4. Low battery indicator            | 11. Auto Tune button     |
| 5. On/Off / Volume control          | 12. Info / Dimmer button |
| 6. Headphone socket                 | 13. Preset button        |
| 7. Auxiliary input socket           | 14. Telescopic aerial    |

## Controls (underneath the radio)

- 15. DC Input socket
- 16. Line Output socket
- 17. Battery compartment
- 18. Micro USB socket  
(inside battery compartment for service use only)

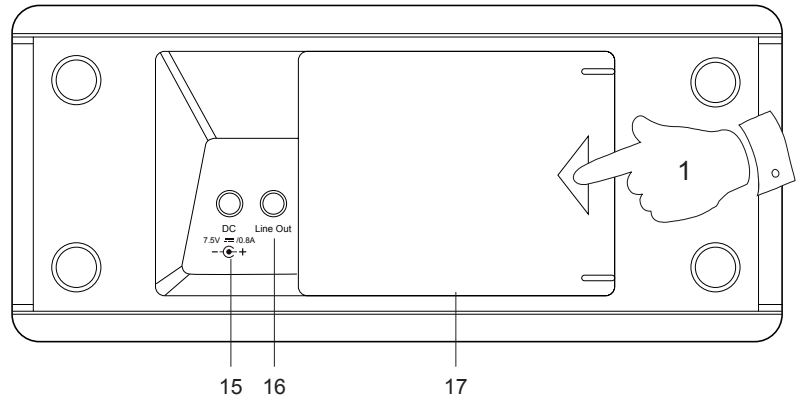

## Battery operation

1. Remove the battery cover located underneath the unit by applying pressure to the catch in the direction shown by the arrow and then lifting up the cover.
2. Insert four LR6 (AA size) batteries into the spaces in the compartment. Take care to ensure all batteries are inserted with the correct polarity as shown inside the battery compartment. Replace the battery cover.
3. The low battery indicator lighting, reduced power, distortion and a 'stuttering' sound are all signs that the batteries may need replacing.
4. If the radio is not to be used for any extended period of time it is recommended that the batteries are removed from the radio.

*We would recommend for economy that the radio is used via the AC adaptor whenever possible with battery operation for occasional use only.*

**IMPORTANT:** The batteries should not be exposed to excessive heat such as sunshine, fire or the like. After use, disposable batteries should if possible be taken to a suitable recycling centre. On no account should batteries be disposed of by incineration.

**Caution:** Replace batteries only with the same or equivalent type. Danger of explosion if the batteries are incorrectly replaced.


## Using the buttons

Most operations on the radio are performed by a simple short press of a button.

A few operations require a longer press of a button. In this case the instructions will tell you to apply a long press, and the button should be held down for 2 or 3 seconds, until the radio has responded. An example of this is applying a long press to the Preset button to set a preset see page 12. When navigating the menus it is generally possible to go back by pressing the **Menu** button.

## Using the radio for the first time

1. Plug the mains adaptor into the DC input socket located underneath your radio (marked 'DC') ensuring that the plug is pushed fully into the socket.
2. Place your radio on a flat surface.
3. Carefully extend the telescopic aerial. The aerial should be fully extended and positioned vertically for optimum reception.
4. Plug the other end of the mains adaptor into a standard mains socket outlet and switch on the wall socket. Whenever the adaptor is used the batteries are automatically disconnected.
5. The display will show 'WELCOME' for a few seconds followed by the clock with blank digits ---:---. During this time the radio is scanning to find a DAB radio signal. After a minute or two the current time will appear on the display.
6. If no signal is found, ---:--- will continue to be displayed. It may be necessary to relocate your radio to a position giving better reception. You should then carry out a scan to find stations, see 'Finding new stations' on page 6.

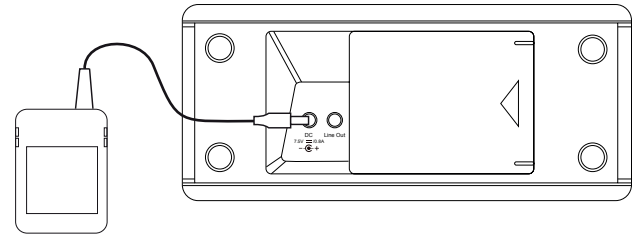

*The AC adaptor should be disconnected from the mains supply and from the radio when not in use.*


**IMPORTANT:** The mains adaptor is used as the means of connecting the product to the mains supply. The mains socket and any multi-way mains block used for the product must remain accessible during normal use. In order to disconnect the product from the mains, the mains adaptor should be removed from the mains socket completely.

Use only the mains adaptor provided with the product, or a genuine replacement provided by Roberts Radio. The use of alternative adaptors will invalidate the guarantee.

## Operating your radio - DAB

1. Carefully extend the telescopic aerial fully.
2. Press the **On/Off** control to switch on your radio. When first switched on, the radio will be in DAB mode. After each use the radio will remember the mode used and then switch on in that mode the next time it is used. If the radio has been used before, the last used station will be selected.
3. If this is the first time the radio has been used a scan of the Band III DAB channels will be carried out (depending on whether scanning was already completed in standby mode). During the scanning process the display will show the progress of the station search. The number on the right of the display is the number of stations that have been found.
4. When the scan is completed the first station (in numeric-alpha order 0...9...A...Z) will be selected. The first station in the list of stations found during scanning will be played. The display will show the station name.
5. If no signals are found then it may be necessary to relocate your radio to a position giving better reception. You should then carry out a scan to find new stations as described on page 6.
- Your radio has an indicator **Y** on the display to indicate the strength of the DAB radio signal being received.




**Note:** When first switched on, the radio will set the volume to a moderately high level, in case the broadcast is very quiet. After you have set the volume, the radio will remember the setting that you have applied for the next time that it is used.

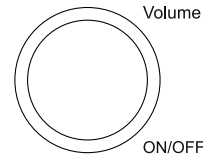

## Selecting a station - DAB

1. Press **On/Off** to switch on the radio.
2. Press **Mode** until the 'DAB' mode is selected.
3. Rotate **Tuning** to step through the list of available stations.
4. Press **Tuning** to select and tune to the desired station.
5. Adjust the **Volume**.

**Note:** If after selecting a station the station does not connect it may be necessary to relocate your radio to a position giving better reception.

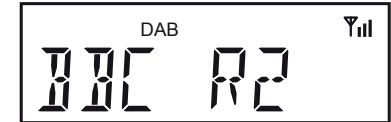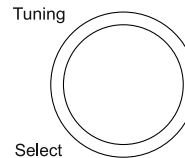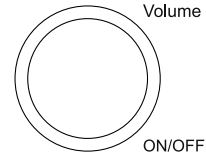


## Secondary services - DAB

Some radio stations may have one or more additional broadcasts associated with them. If these are available, they will appear immediately after the main station as you rotate the **Tuning** control clockwise. To tune to the selected service, press **Tuning**.

## Finding new stations - DAB

As time passes new stations may become available or you may have moved your radio to a different part of the country. In this case you may need to cause your radio to scan for new stations.



1. Press **On/Off** to switch on the radio.
2. Press **Mode** until the 'DAB' mode is selected.
3. To scan, press **Auto Tune**.
4. Your radio will perform a scan of the Band III DAB channels. As new radio stations are found the station counter on the right-hand side of the display will increase and the radio stations will be added to the list stored in the radio.

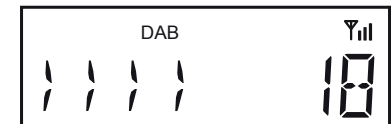

## Manual tuning - DAB

Manual tuning allows you to tune your radio to a particular DAB frequency in Band III. Any new stations found will be added to the station list. This function can also be used to assist the positioning of the aerial or the radio to optimise reception for a specific channel or frequency.



1. Press **Mode** until the 'DAB' mode is selected.
2. Press **Menu**. The display will show 'MANUAL'. Press **Tuning**.
3. Rotate **Tuning** to select the desired DAB channel. Press **Tuning** to tune to the chosen frequency.
4. If a signal is present, this will be indicated on a signal strength display. The minimum signal marker (◻) shows the minimum signal strength needed for good DAB reception.
5. When a DAB signal is found, as shown by the signal indicator boxes, any new radio stations found with this signal will be added to the list stored in the radio.
6. Press **Menu** to exit.

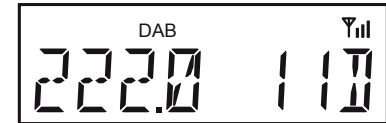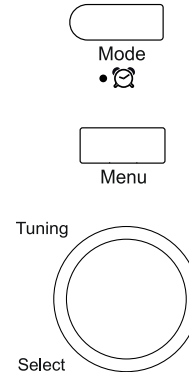

## Dynamic Range Control (DRC) settings - DAB

The DRC facility can make quieter sounds easier to hear when your radio is used in a noisy environment.

1. When in DAB mode, press **Menu**.
2. Rotate **Tuning** until 'DRC' is displayed. Press **Tuning**.
3. Rotate **Tuning** to select the required DRC setting.  
DRC 0 - DRC is switched off, Broadcast DRC will be ignored. DRC 1/2 - DRC level is set to 1/2 that sent by broadcaster. DRC 1 - DRC is set as sent by broadcaster.
4. Press **Tuning** to confirm the setting. **Note:** Not all DAB broadcasts use the DRC function. If the broadcast does not provide DRC information, then the DRC setting in the radio will have no effect.

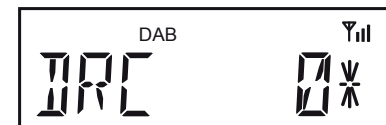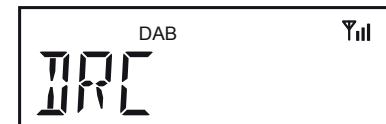




## Station order - DAB

Your radio has 3 station order settings from which you can choose. The station order settings are, name, ensemble and active.

**Note:** The default station order on your radio is name.

1. When in DAB mode, press **Menu**.
2. Rotate **Tuning** until 'ORDER' is displayed. Press **Tuning**.
3. Rotate **Tuning** until the required station order setting is displayed.  
'Name' - sorts the station list alpha-numerically 0...9 A...Z.  
'Active' - shows only those stations for which a signal can be found.  
'Ensemble' - organises the station list by DAB multiplex.  
The current setting is indicated by an asterisk.
5. Press **Tuning** to confirm the setting.

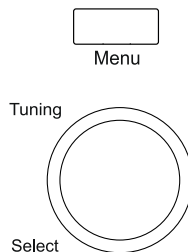

## Prune stations - DAB

If you move to a different part of the country, some of the stations which were listed may no longer be available. Also, from time to time, some DAB services may stop broadcasting, or may change location or frequency. Stations which cannot be found, or which have not been received for a very long time are shown in the station list with a question mark.

The Prune stations function will delete the marked DAB stations from your station list.


1. When in DAB mode, press **Menu**.
2. Rotate **Tuning** until 'PRUNE' is displayed. Press **Tuning**.
3. Rotate **Tuning** until 'YES' is displayed. Press **Tuning** to cause the invalid station names to be removed from the station list.
4. If you do not wish to prune stations choose 'NO' in step 3 above.

**Note:** If you have moved your radio to a different part of the country you should also carry out a search for new stations (please see the section 'Finding new stations' on page 6).



## Operating your radio - FM

1. Carefully extend the telescopic aerial fully.
2. Press **On/Off** to switch on the radio.
3. Press **Mode** until the 'FM' mode is selected.
4. Rotate **Tuning** clockwise and then press the **Auto Tune** button. Your radio will scan in an upwards direction (low frequency to high frequency) and stop automatically when it finds a station of sufficient strength. After a few seconds the display will update. The display will show the frequency of the signal found. If the signal is strong enough and there is RDS data present then the radio will display the station name.
5. To find other stations, press the **Auto Tune** button as before. To scan the FM band in a downwards direction (high frequency to low frequency) rotate **Tuning** anti-clockwise and then press the **Auto Tune** button.
6. When the waveband end is reached your radio will recommence tuning from the opposite waveband end. Adjust the **Volume**.
7. To switch off your radio press **On/Off**.

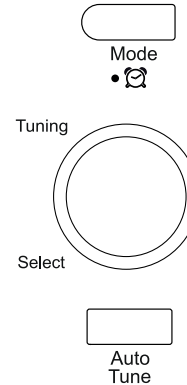


## Manual tuning - FM

1. Rotate **Tuning** to tune to a station. The frequency will change in steps of 50kHz.
2. Adjust the **Volume**.

## FM Stereo/Mono (Headphones and Line Output socket only)

1. If an FM station being received is weak some hiss may be audible. To reduce this, press **Tuning** until the display shows 'MONO'. Your radio will switch to mono mode.
2. To return to stereo mode press **Tuning** until the display shows 'STEREO'. Your radio will switch to stereo mode.

**Note:** Stereo listening is only available when listening via headphones or when using the Line Out socket connected to an external amplifier.

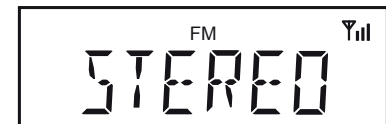


## Scan sensitivity setting - FM

Your radio will normally scan for FM broadcasts which are strong enough to give good reception. However, you may wish the Auto-scan function to also be able to find weaker signals, possibly from more distant radio transmitters. Your radio includes a local / distant option for the Auto-scan function.

1. When in FM mode, press **Menu**.
2. The display will show 'SCAN'. Press **Tuning**.
3. Rotate **Tuning** to choose either the 'LOCAL' or 'DISTANT' option. The Distant option will allow the radio to find weaker signals when scanning.
4. Press **Tuning** to confirm. The Local or Distant setting is stored in the radio and remains in force until changed or until a System Reset.

**Note:** The initial setting (out of the box, or after a System Reset) causes the radio to ignore weaker (or more distant) signals.

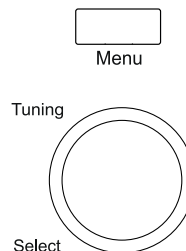

## Favourite button

Your radio is fitted with a button which when pressed will automatically select the required waveband and tune to your favourite radio station. With this button you can store one favourite station from either the DAB or FM wavebands.

1. Select the desired waveband (DAB or FM) and tune to the required station. **Apply a long press** on the **Favourite** button (for 5 seconds) until the display shows 'SAVED'.
2. To recall your favourite station momentarily press the **Favourite** button.



## Display options - DAB / FM

Your radio has a range of display options when in DAB and FM modes:-

1. Press **Info** to cycle through the various options. All displays except the text display will revert to the clock display after about 10 seconds.

### DAB display options

Your radio can display the following in DAB mode:-

Scrolling text, program type, station name, time, date, channel/ frequency, bit rate, audio type and signal strength.

For the signal strength, the minimum signal marker (▢) shows the minimum signal strength needed for good DAB reception. The signal indicator boxes increase or decrease showing the changing signal strength as you adjust the telescopic aerial or your radio position.

### FM display options

In FM mode your radio can use the Radio Data System (RDS) to display the radio station name and additional text when provided by the broadcaster and where the radio signal is sufficiently clear.

Your radio can display the following in FM mode:-

Station name, scrolling text, program type, frequency, audio mode, time and date.



Scrolling text (DAB and FM)




Signal strength (DAB only)



Frequency (DAB and FM)



Time (DAB and FM)

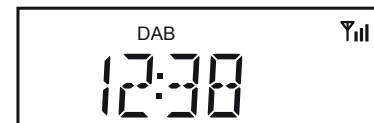

## Preset stations - DAB and FM

To make it easier for you to tune your radio to the stations that you prefer, you may store selected radio stations as presets. Your radio holds presets separately for DAB and FM radio modes.




You may set as many or as few presets as you like in each mode.

You can easily switch between displaying all DAB stations (or all FM frequencies) and displaying only those that you have set as presets.

Any station or frequency which has been marked as a preset can easily have the mark cancelled should your preferences or needs change.

Presets are retained when your radio is switched off.

1. To setup your preset stations, tune into the required station.
2. **Apply a long press** on the **Preset** button so that the tick symbol shows in the display. This indicates that the radio station is marked as a preset. To cancel the preset mark, **apply a long press** on the **Preset** button again.
3. Repeat steps 1 and 2 as needed for any other stations that you want as presets.
4. To view only the preset stations for the currently selected waveband when tuning, press and release the **Preset** button so that the heart symbol shows in the display.
5. To listen to one of the preset radio stations, rotate the **Tuning** control until the required radio station is displayed. The radio will automatically tune to that station.
6. To cancel the preset stations view, press and release the **Preset** button so that the heart symbol disappears from the display. Your radio will then be able to access the full station list using the **Tuning** control.

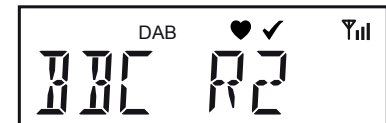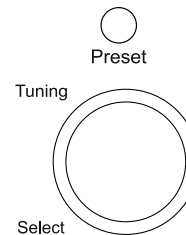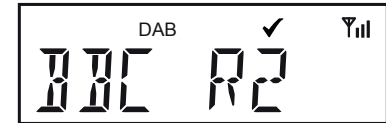

## Setting alarm times

Your radio has two alarms which can be set to wake you to DAB, FM radio or buzzer alarm. Each alarm can be set to sound once, daily, on weekdays or at weekends. In the event of a power interruption your radio has a built in memory that will retain your alarm settings. Ensure that the time is set correctly before setting the alarms. Alarms can be set while the radio is in Standby or switched on.

**Note:** Alarms cannot be used when the radio is powered from the batteries.

**Note:** If no buttons are pressed for 10 seconds, your radio will exit the alarm setup.

1. To change the states of the alarms while the radio is in Standby, repeatedly press the **Mode/Alarm** button. The display will cycle through No alarm, Alarm 1 enabled, Alarm 2 enabled or Alarm 1 and 2 enabled.
2. To change the detailed alarm settings while the radio is in Standby, **apply a long press** on the **Mode/Alarm** button. This will cause the alarms menu to be displayed. Then skip to step 5 below.
3. Alternatively, to change the alarm settings while the radio is switched on, press **Menu**.
4. Rotate **Tuning** until 'ALARM' is displayed. Press **Tuning**.
5. Rotate **Tuning** to display either 'ALARM 1' or 'ALARM 2'. Press **Tuning** to enter the alarm setting menu.
6. Rotate **Tuning** to select 'ON' or 'OFF'. If OFF is selected any current setting for that alarm will be cancelled.
7. With 'ON' selected press **Tuning** to cause the alarm hour digits to flash on the display.
8. Rotate **Tuning** to choose the desired alarm hour.




Mode  
• 🔊



Menu

Tuning

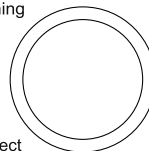

Select



9. Press **Tuning**. The alarm minute digits will flash on the display.

10. Rotate **Tuning** to choose the desired alarm minute.

11. Press **Tuning**. The alarm day option will flash on the display.

12. Rotate **Tuning** to choose the desired alarm day option:

- |          |                               |
|----------|-------------------------------|
| Daily    | - Will sound everyday         |
| Once     | - Will sound at one time only |
| Weekdays | - Will sound only on weekdays |
| Weekends | - Will sound only on weekends |



13. Press **Tuning**. The alarm mode option will flash on the display.



14. Rotate **Tuning** to choose the desired alarm mode (DAB, FM, BUZZER).  
If setting the alarms to the radio option, the radio alarm will be set to the last listened radio station.

15. Press **Tuning**. The volume setting will show on the display.

16. Rotate **Tuning** to choose the desired alarm volume. The radio uses the saved volume settings for each alarm when it sounds.

17. Press **Tuning** to confirm the alarm settings. 'SAVED' will show on the display before exiting the alarm setup.

Alarms are indicated in the display by the alarm   symbol and the corresponding alarm number.

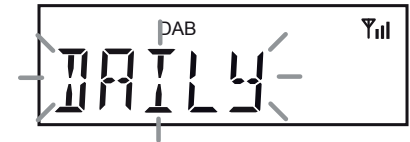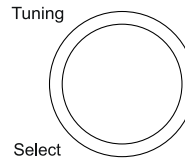

## When the alarm sounds

The alarm will sound at the selected times for up to 60 minutes unless cancelled. The maximum volume used for the alarm will be specified during the alarm setting procedure. When your radio is set to wake by the radio alarm, your radio will switch to the selected radio station. If the radio cannot connect to the specified DAB radio station, the buzzer will be used instead.

**Note:** If the radio is switched on because of a radio alarm you can control basic functions such as the volume control.

When the alarm activates it will start softly and gradually increase in level.


The alarm icon will flash on the screen and the radio will automatically switch back to standby mode when the 60 minutes have elapsed.

## Cancelling alarms

1. Whilst an alarm is sounding, press **On/Off** to cancel the alarm.

## Snooze function

1. When the radio or buzzer alarm sounds, press **Tuning/Select/Snooze** control. This will silence the alarm for the selected number of minutes. The snooze duration can be adjusted between 5 and 20 minutes in 5 minute increments. The default setting is 5 minutes.


When Snooze has been pressed during an alarm, the display will show the Snooze symbol . This sequence can be repeated as needed. The snooze function can also be activated using other buttons on the radio.

2. To cancel the Snooze function, press **On/Off**.

## To set the snooze time

The snooze duration can only be set while the radio is playing.


1. When your radio is playing, press **Menu**.
2. Rotate **Tuning** until 'SNOOZE' appears on the display.
3. Press **Tuning**.
4. Rotate **Tuning** to choose the desired snooze setting from between 5, 10, 15 and 20 minutes.
5. Press **Tuning** to confirm the setting.

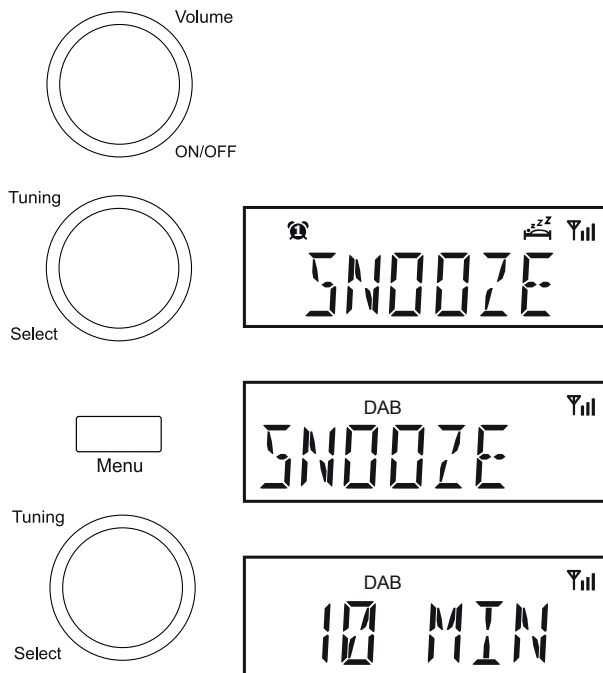




## Disable alarms


1. To disable alarms while the radio is in Standby repeatedly press the **Mode/Alarm** button to cycle through the alarm on-off options (see page 13, step 1).
2. Alternatively, to disable an alarm enter the alarm setup menu (see page 13, step 2-4) and rotate **Tuning** until the desired alarm is displayed. Press **Tuning**.
3. Select the 'OFF' option. The chosen alarm will now be disabled.

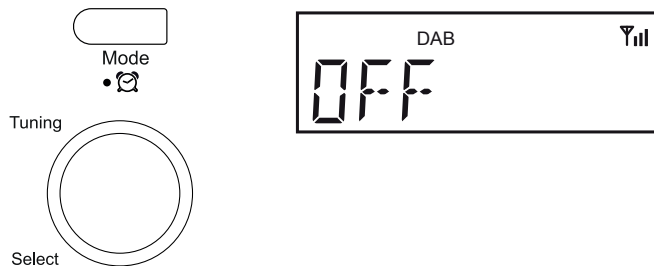

## Sleep function

Your radio can be set to turn off after a preset time has elapsed. The sleep timer can be set to between 10 and 90 minutes.

1. Press **On/Off** to switch on the radio.
2. Press **Menu**.
3. Rotate **Tuning** until 'SLEEP' appears on the display. Press **Tuning**.
4. Rotate **Tuning** to select the desired sleep time. The sleep setting will increase in 10 minute increments from 10 up to 90 minutes. A further increment will cause the sleep timer to be set to OFF which will cancel the sleep function.
5. Press **Tuning**. The sleep symbol  will appear on the display. The display will exit the sleep options. Your radio will switch off after the preset sleep time has elapsed.
6. To view the remaining sleep time, follow steps 2 to 3 above. The remaining sleep time will show on the display.
7. To cancel the sleep timer and switch off your radio before the chosen sleep time has elapsed, press **On/Off**. To cancel the sleep timer without switching off your radio, set the sleep timer to the OFF setting.

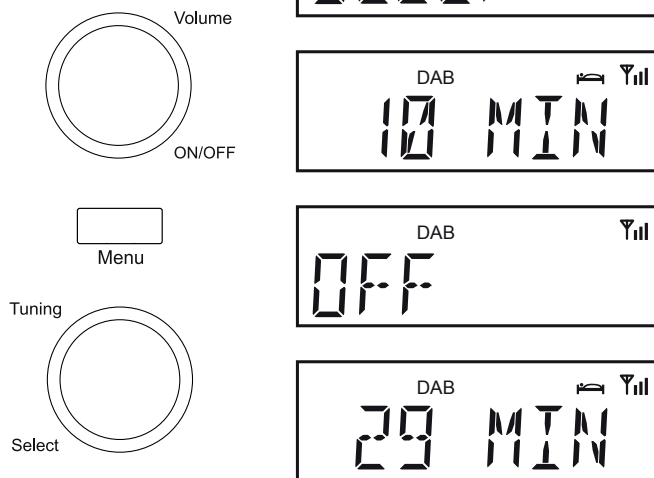

## Automatically updating the clock

Your radio will usually set the clock time using the DAB signal. Alternatively you may set the clock manually.



1. Press **On/Off** to switch on the radio.
2. Press **Menu**.
3. Rotate and press the **Tuning** control to select 'TIME', 'AUTO' then choose an update option from, DAB or NO (None).
4. Press **Tuning** to confirm your choice.
5. The radio will set its time according to the information received.

If a signal is not found you should then either position the radio or its aerial so that a signal can be received, or revert to manual clock mode below.

## Setting the clock manually

Normally your radio will set its clock automatically using the DAB radio signal. If no DAB signal is available and you need to set the time manually, please follow the procedure shown below.

1. Press **On/Off** to switch on the radio.
2. To set the clock, press **Menu**.
3. Rotate and press the **Tuning** control to select 'TIME', 'MANUAL', hour, minute, day, month and year setting.
4. Press **Tuning** to confirm the time setting.

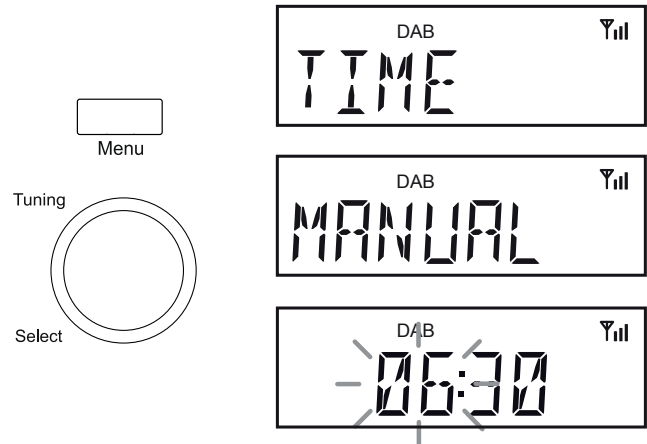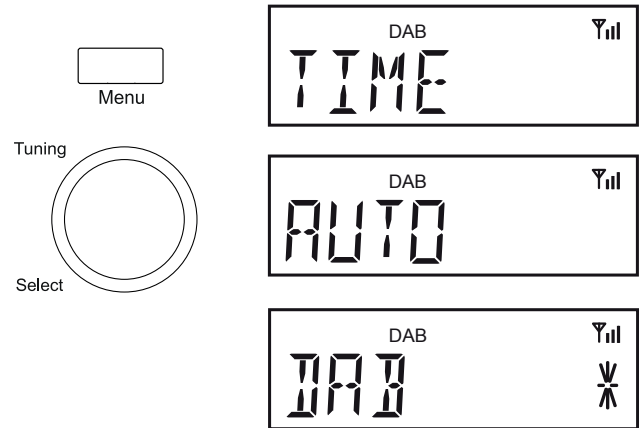

## Software version

The software version display cannot be altered and is just for your reference.

1. Press **On/Off** to switch on the radio.
2. Press **Menu**.
3. Rotate **Tuning** until 'SW VERSION' appears on the display. Press **Tuning** to display the software version.
4. Press **Menu** as needed to exit.

## Display backlight dimmer

The brightness of the display can be adjusted for when the radio is in standby. If you use the unit in the bedroom, you may prefer a lower standby brightness level than the standard setting. There are four standby brightness levels.



To change the current standby brightness setting please follow these steps.

1. Press **On/Off** to switch off the radio.
2. Press the **Dimmer** button to choose from the High, Medium, Low or almost Off dimmer setting.

When the radio is in standby pressing any button (except the dimmer button) or the rotary controls will cause the radio to switch to the 'High' brightness level for a few seconds. This is so that if the standby brightness level is set to Low or almost Off, it is still possible to see the time when needed.

When your radio is powered by the AC mains using the supplied mains adaptor the display backlight will always be on whenever the radio is switched on.


When using the radio powered from the batteries, the display backlight will be switched on for approximately 12 seconds when any button is pressed.

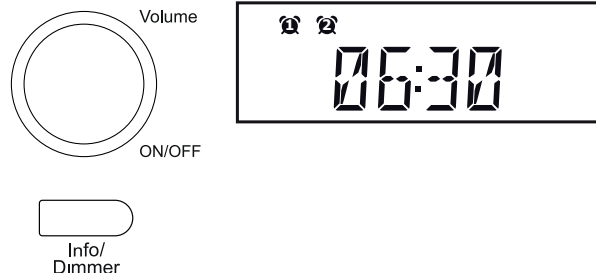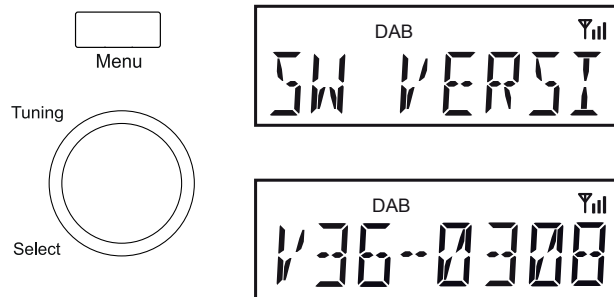

## Language function

Your radio's menus can be configured to a different language.

1. Press **On/Off** to switch on the radio.
2. Press **Menu**.
3. Rotate and press the **Tuning** control to select 'LANGUAGE' and then select your desired language.
4. The display will change to the chosen language.
5. Press **Menu** as needed to exit.

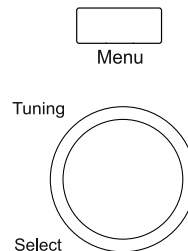


## Equaliser function (My EQ)

The sound on your radio can be adjusted to suit your personal taste for the material that you are listening to.

You may set the treble and bass levels to your own preferences using the 'My EQ' menu.

1. Press **On/Off** to switch on the radio.
2. Press **Menu**.
3. Rotate **Tuning** until 'MY EQ' appears on the display.
4. Press **Tuning**. 'TREBLE' will show on the display.
5. Rotate **Tuning** until the desired level (between - 4 and + 4) is displayed.
6. Press **Tuning**. 'BASS' will show on the display.
7. Rotate **Tuning** until the desired level (between - 4 and + 4) is displayed.
8. Press **Tuning** to confirm the setting.
9. Press **Menu** as needed to exit.

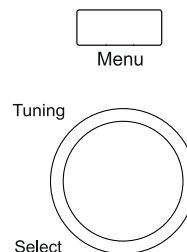

## Headphone socket

A 3.5mm **Headphone Socket** located on the top left hand corner of the radio is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal loudspeaker.

Please be aware that the sensitivity of headphones can vary widely. We therefore recommend setting the volume to a low level before connecting headphones to the radio.

**IMPORTANT:** Excessive sound pressure from earphones and headphones can cause hearing loss.



To prevent possible hearing damage, do not listen at high volume levels for long periods.

## Auxiliary input socket




1. Connect a stereo or mono audio source (i.e. CD player, MP3 player, etc.) to the **Auxiliary input** socket.
2. Press **On/Off** to switch on the radio.
3. Press **Mode** until the display shows 'AUX IN'.

**Note:** The Auxiliary Input mode can only be selected when a plug is inserted in the socket.

4. Adjust the **Volume** control on your player and on the radio for comfortable listening.
5. Remove the cable from the **Auxiliary input** socket or press **Mode** to cancel Auxiliary Input mode. Note that audio played via the auxiliary input will be played in mono through the speaker and in stereo through stereo headphones.

## Line output socket


A 3.5mm stereo **Line out socket** located underneath your radio is provided for connecting the audio signal to an external amplifier. Inserting a line out audio cable will not mute the internal loudspeaker. Set the volume control on the radio to minimum if desired.

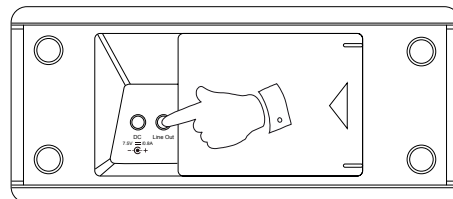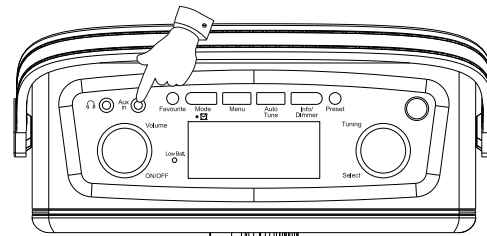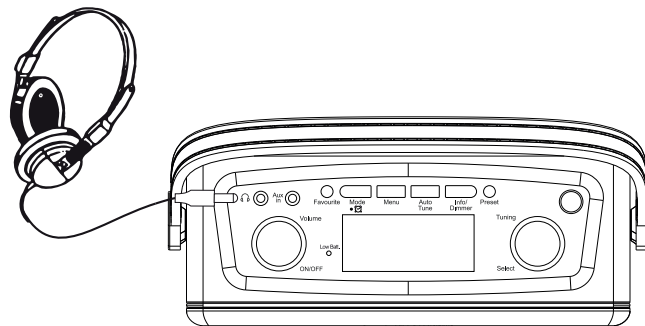

## System reset

If your radio fails to operate correctly, or some digits on the display are missing or incomplete carry out the following procedure.

1. Press **On/Off** to switch on the radio.
2. Press **Menu**.
3. Rotate **Tuning** until 'RESET' appears on the display. Press **Tuning**.
4. Rotate **Tuning** until 'YES' appears on the display. If you do not wish to carry out a system reset, choose 'NO'. The display will revert to the previous display.
5. With 'YES' displayed, press **Tuning**. A full reset will be performed. The station list and presets will be erased. Alarms will be cancelled and settings will be set to their default values. The display will show \*RESET\* and then 'WELCOME'. The radio will then restart as when first plugged in (see also page 4).

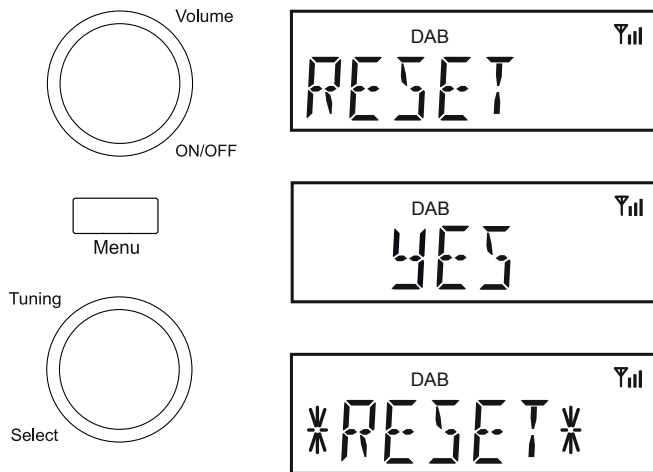

## Electro-magnetic compatibility advice

In the event of a malfunction due to electrostatic discharge, mains power supply transients or short interruptions, reset the product as above to resume normal operation. If you are not able to perform the reset operation as above, removal and reconnection of the power supply and batteries may be required.

If the product is used in an environment with any ESD Immunity / Radiated Immunity / Conducted Immunity disturbance, the product may malfunction. It will automatically recover to normal when the ESD Immunity / Radiated Immunity / Conducted Immunity disturbance is stopped.

## Product markings

|  |   |
|--|---|
|  | <b>DC Voltage</b><br>7.5V / 0.8A  |
|  | <b>Recycling</b><br>This product bears the selective sorting symbol for Waste Electrical and Electronic Equipment (WEEE). This means that this product must be handled pursuant to European directive 2012/19/EU in order to be recycled or dismantled to minimize its impact on the environment.<br>The user has the choice to give the product to a competent recycling organization or to the retailer when buying a new electrical or electronic equipment. |

## Safety notices

Do not allow this radio to be exposed to water, steam or sand. Do not leave your radio where excessive heat could cause damage such as in a parked car where the heat from the sun can build up even though the outside temperature may not seem too high. It is recommended that the DAB band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the FM band.



The name plate is located underneath the radio.

Please handle with care. The leather-cloth finish may be susceptible to damage if mistreated. Avoid all contact with any abrasive material, chemical substances or cleaning solutions. Your radio may be wiped with a clean lightly damp cloth. **Please ensure that the product is unplugged from the mains socket outlet before attempting this procedure.**

## Specifications

### Power Requirements

Mains AC 100 ~ 240 volts, 50/60Hz (adaptor)  
(Use only the supplied adaptor)

Batteries 4 x LR6 (AA Size)

Battery Life Up to 25 hours using alkaline cells depending upon the volume and operating mode.

- Your radio and AC/DC adaptor should not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the radio or adaptor.
- It is recommended to operate the product such that there is a minimum distance (10cm recommended) to adjacent objects in order to ensure good ventilation.
- The ventilation of the product should not be restricted by covering it or its ventilation openings with items such as newspapers, tablecloths, curtains etc.
- No naked flame sources such as lighted candles should be placed on the product.
- It is recommended to avoid using or storing the product at extremes of temperature. Avoid leaving the unit in cars, on window sills, in direct sunlight etc.
- There are no user serviceable parts inside this product.
- Do not attempt to disassemble any part of the product.
- The product must be used in a moderate climate.

## Circuit Features

Headphone socket (stereo) 3.5mm dia.

Auxiliary Input socket (stereo) 3.5mm dia.

Line Output socket (stereo) 3.5mm dia.

Aerial System FM / DAB telescopic aerial

### Frequency Coverage

FM 87.5-108MHz

DAB 174.928 - 239.200MHz

*The Company reserves the right to amend the specification without notice*

## Guarantee

This product is guaranteed for twenty four months from the date of purchase by the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Product with removed or defaced serial numbers.

N.B. Damaged or broken telescopic aerials will not be replaced under guarantee.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the product was purchased. It is likely that your Roberts dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the product to the company's service department for attention. In the event that it is not possible to return the product to the Roberts dealer from whom it was purchased, please contact Roberts Radio using the contact details on the [www.robertsradio.com](http://www.robertsradio.com) website.

For product repairs falling outside the guarantee period, please refer to the "customer care" tab on the [www.robertsradio.com](http://www.robertsradio.com) website.

*These statements do not affect the statutory rights of a consumer.*

### ROBERTS RADIO LIMITED

PO Box 130  
Mexborough  
South Yorkshire  
S64 8YT

Website: <http://www.robertsradio.com>

